

External Enclosure User's Manual

(One Touch Backup)

✧ Include

Backup4all Software Installation Guide

Hardware Installation Guide



External Enclosure Driver Installation Guide

Backup4all Software Installation


- (1) Insert Backup4all CD to the CD-ROM driver.
- (2) Double Click “autorun.exe”
- (3) Please following instruction on the pop-up windows for installing the OTB software.




OTB External Enclosure Installation Guide

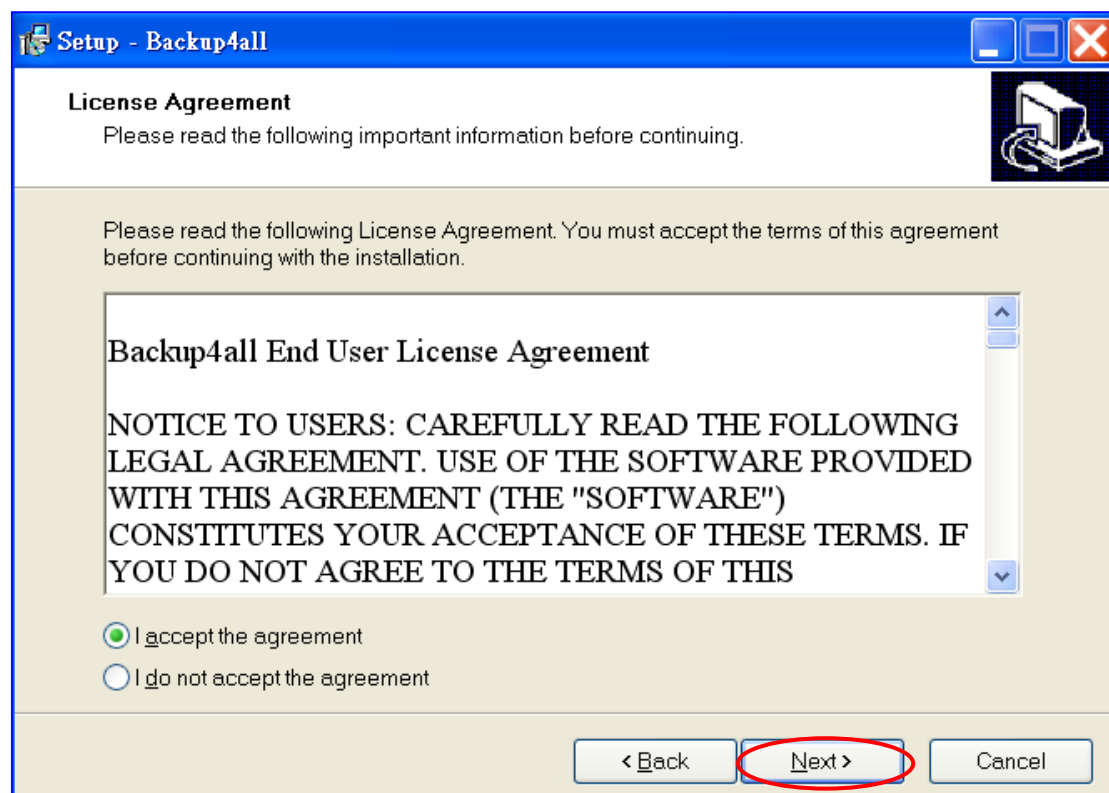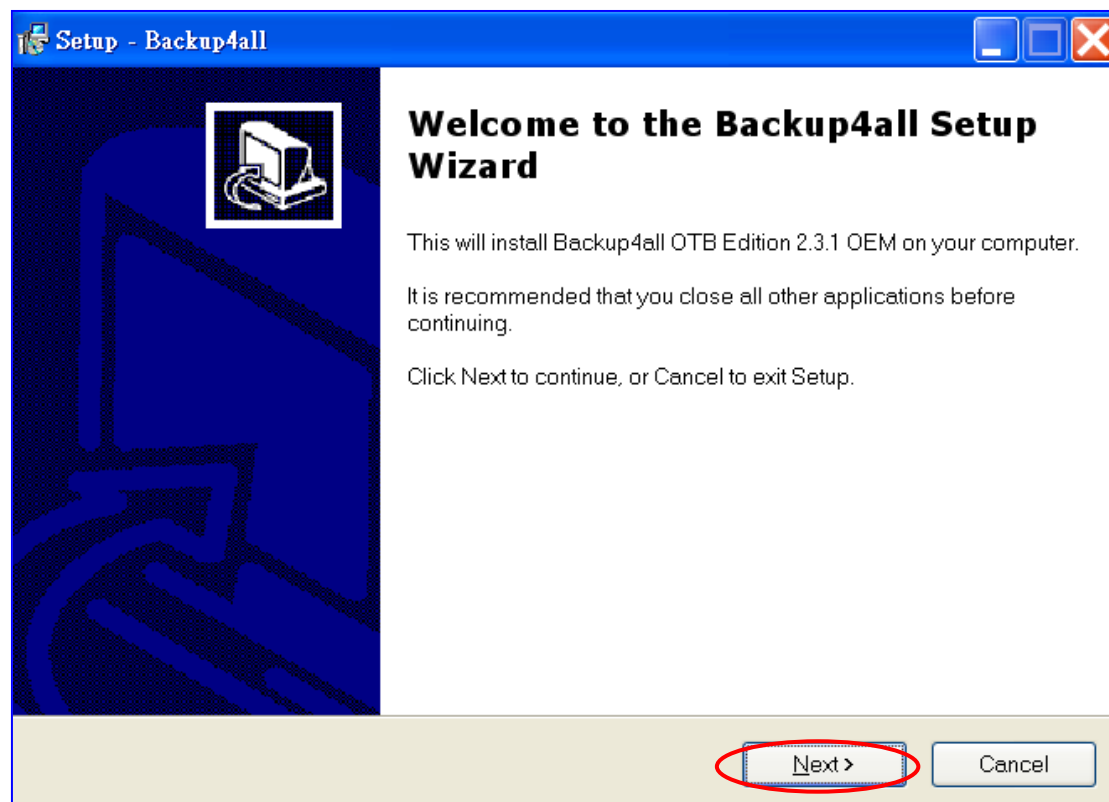



OTB External Enclosure Installation Guide

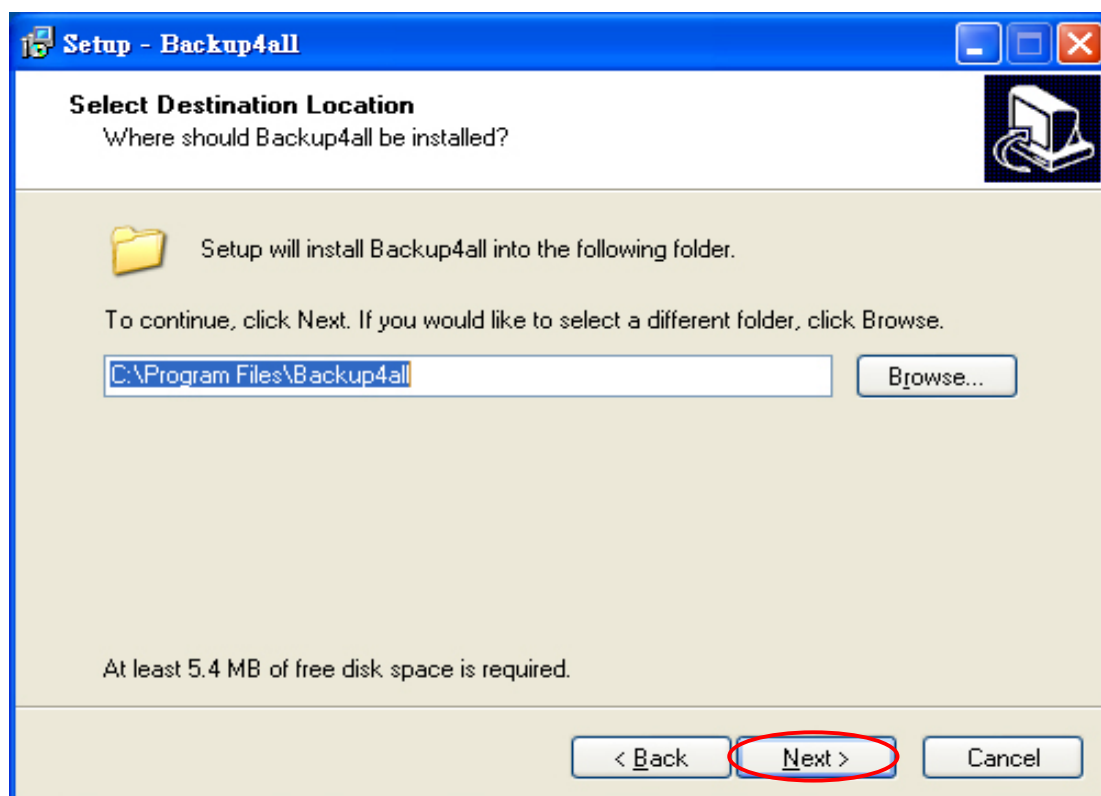



Select folder where Setup will install files (C:\Program Files\Backup4all) then click "Next"

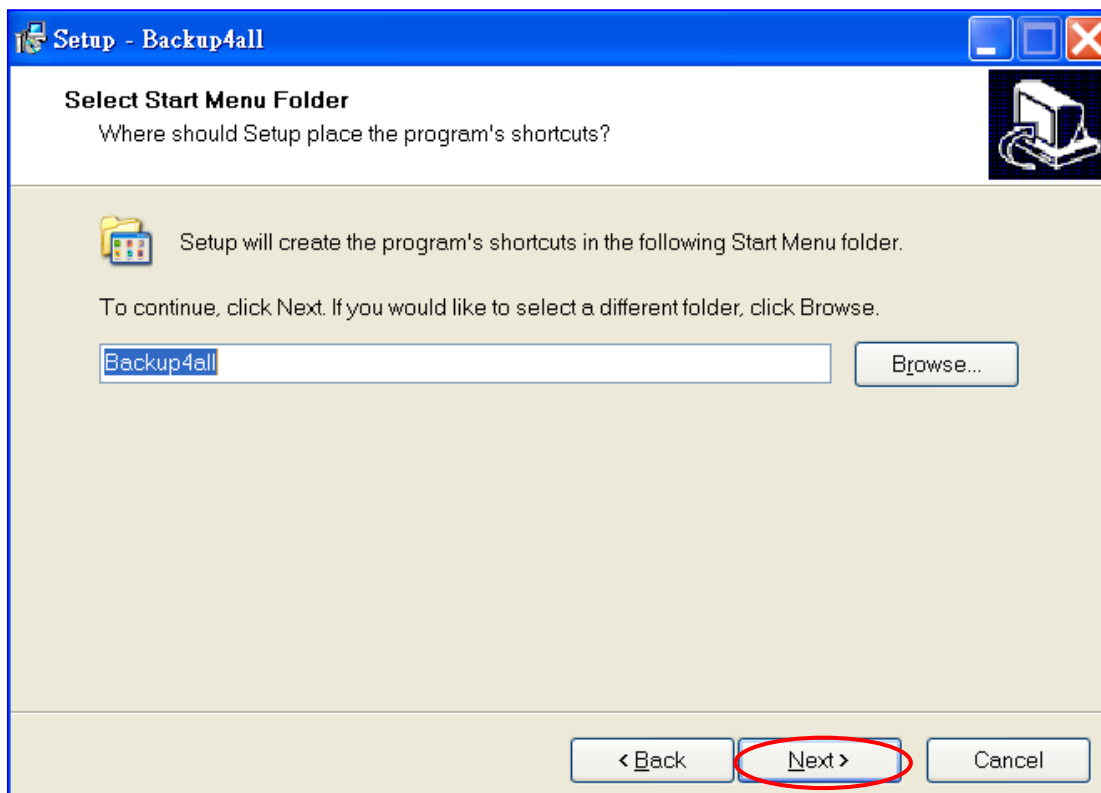

OTB External Enclosure Installation Guide

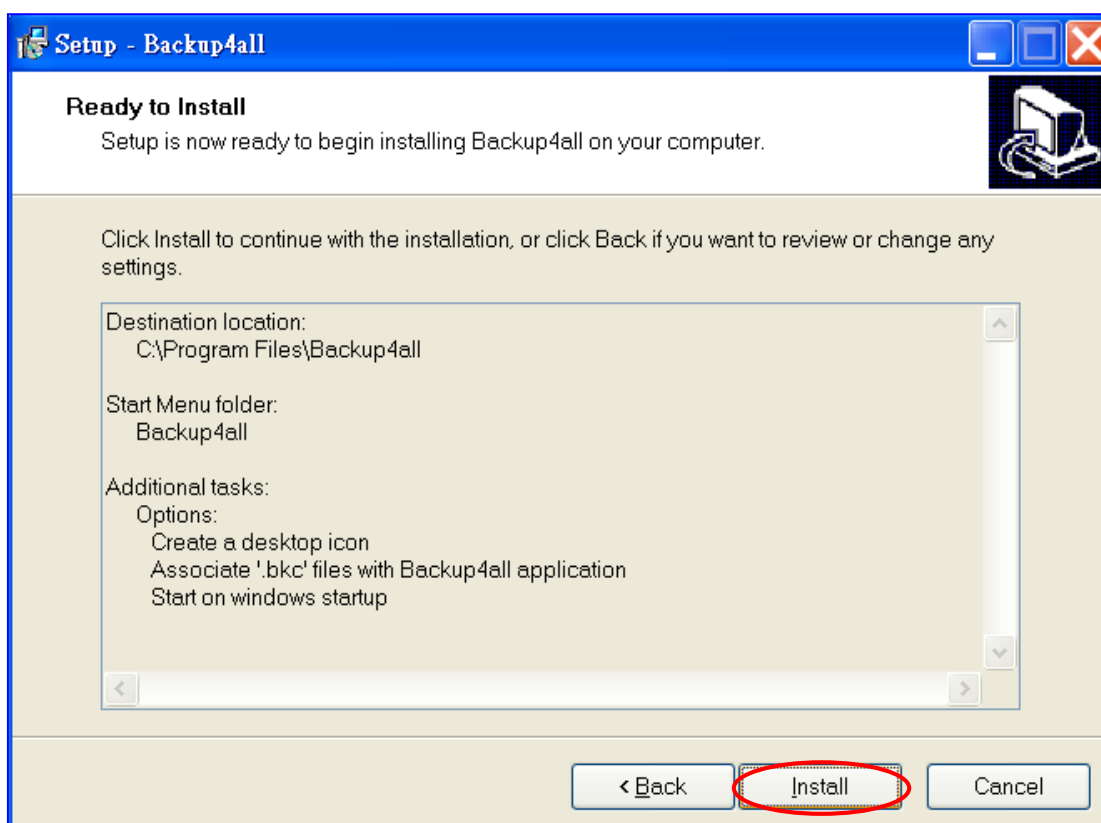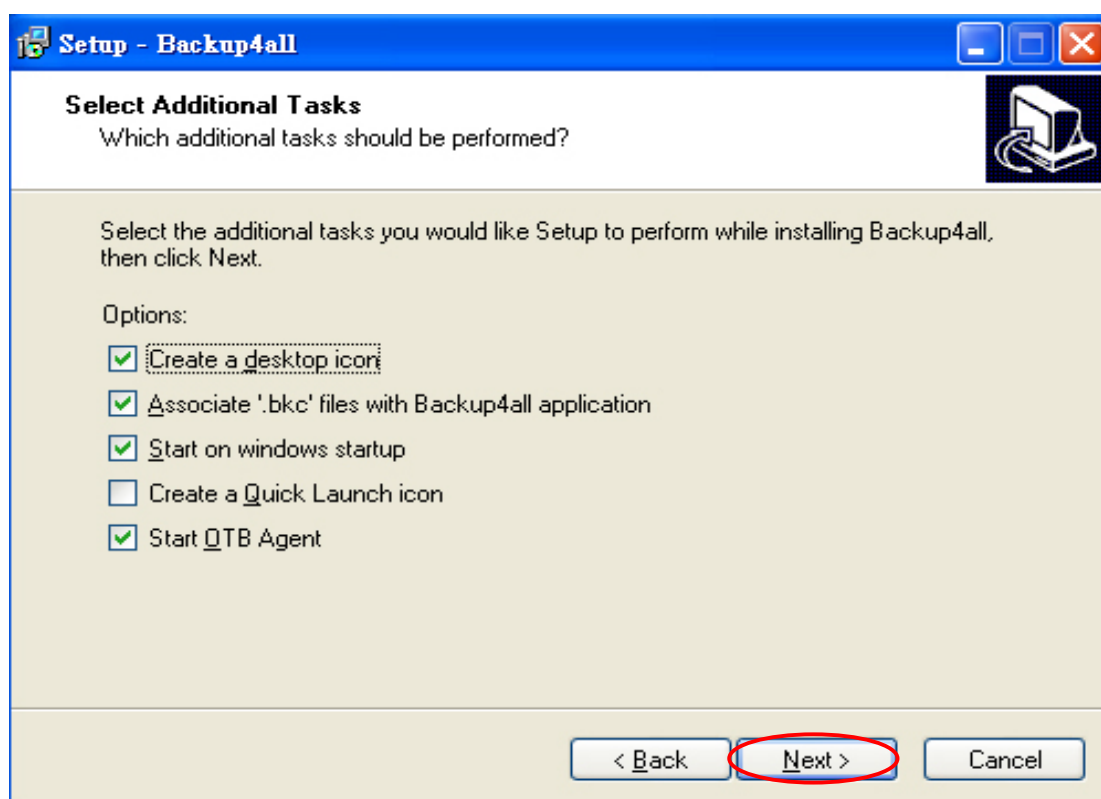

OTB External Enclosure Installation Guide

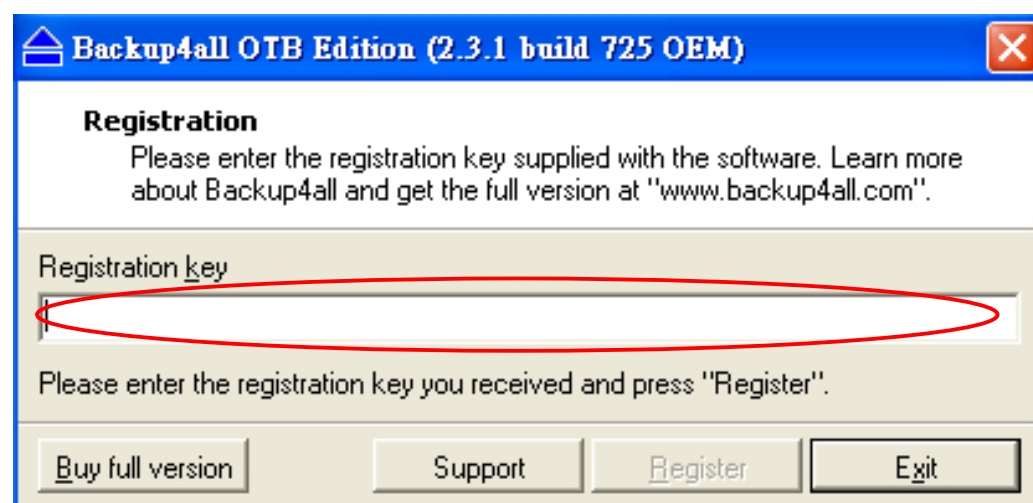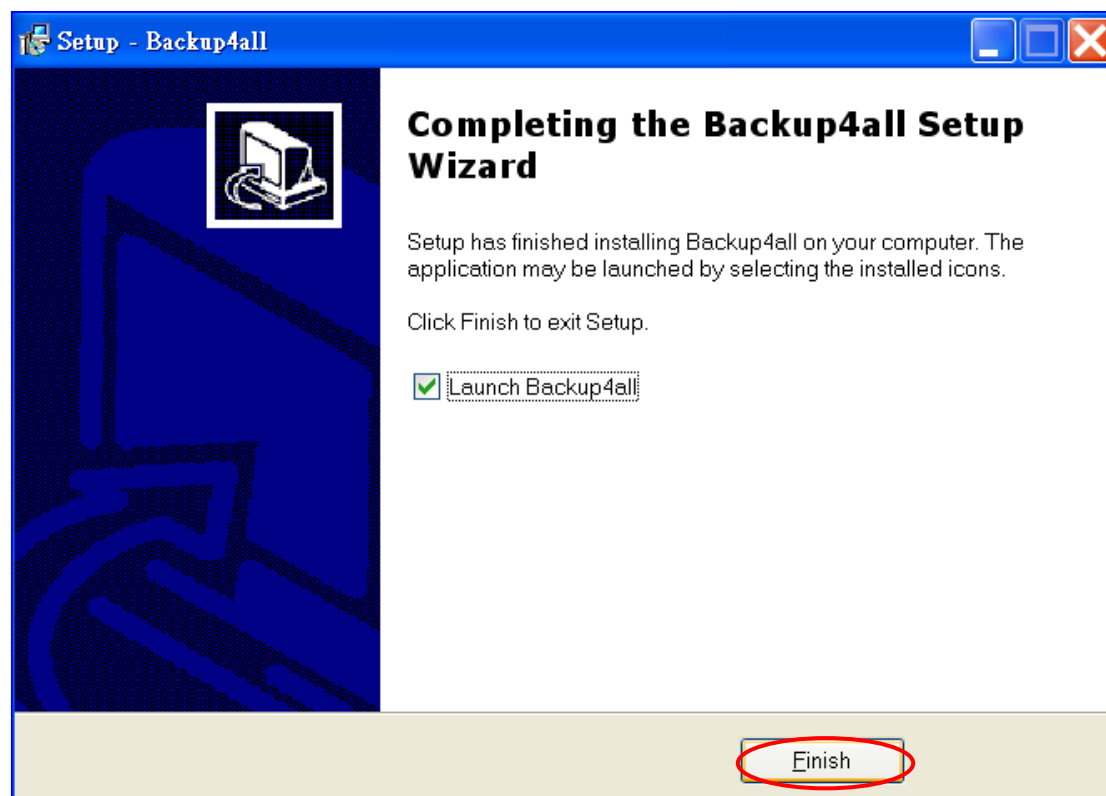


Enter the KEY on the CD and click “Register”.

Hardware Installation Guide

STEP1 : Connect the hard drive to the IDE connector on the PCB board



STEP2 : Insert the HD and PCB board to the aluminum case.

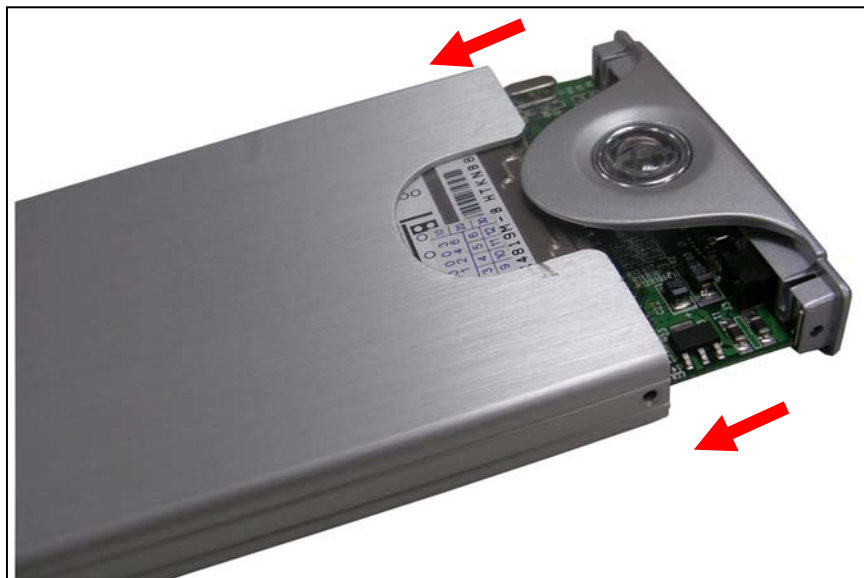

OTB External Enclosure Installation Guide

STEP3 : Screw the back cover firmly to the body case.



STEP4 : Screw the front cover firmly to the body case.



External Enclosure Driver Installation

Windows ME / 2000 / XP

The system already support for the driver.



(Please do not install the driver again unless necessary).

Windows 98 /98SE


- (1) Insert Backup4all CD to the CD-ROM drive.
- (2) Double Click “autorun.exe”.
- (3) Please following instruction on the pop-up windows for installing the 98 dirver.



OTB External Enclosure Installation Guide

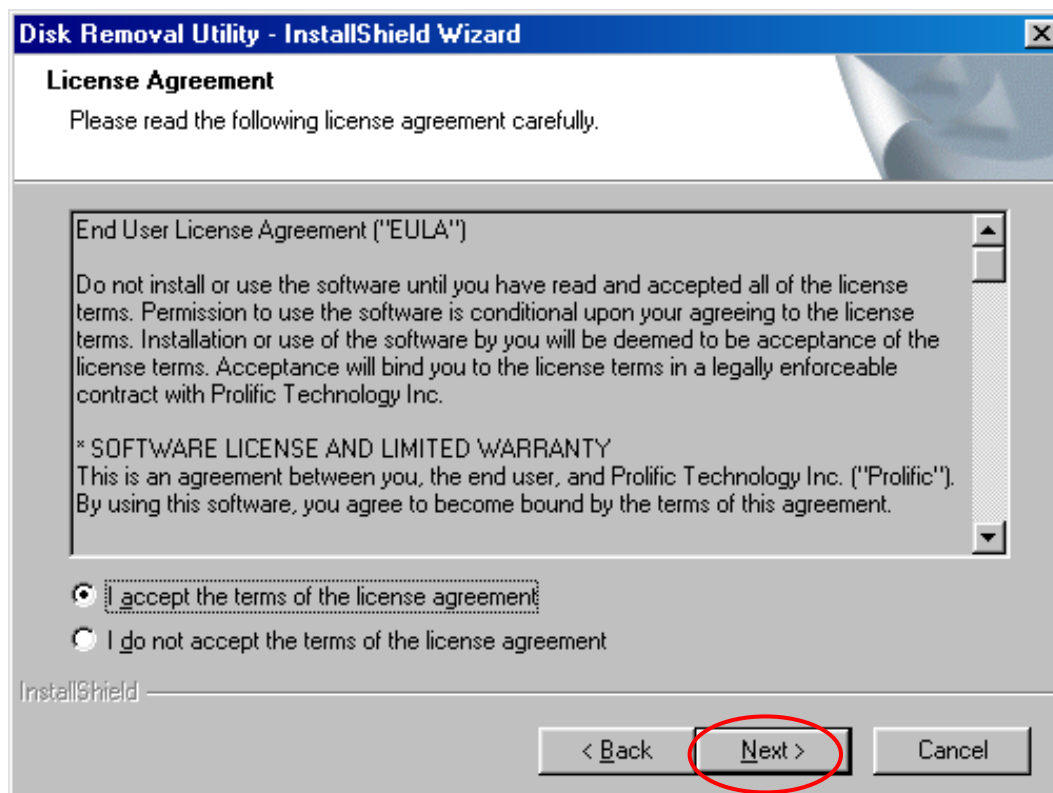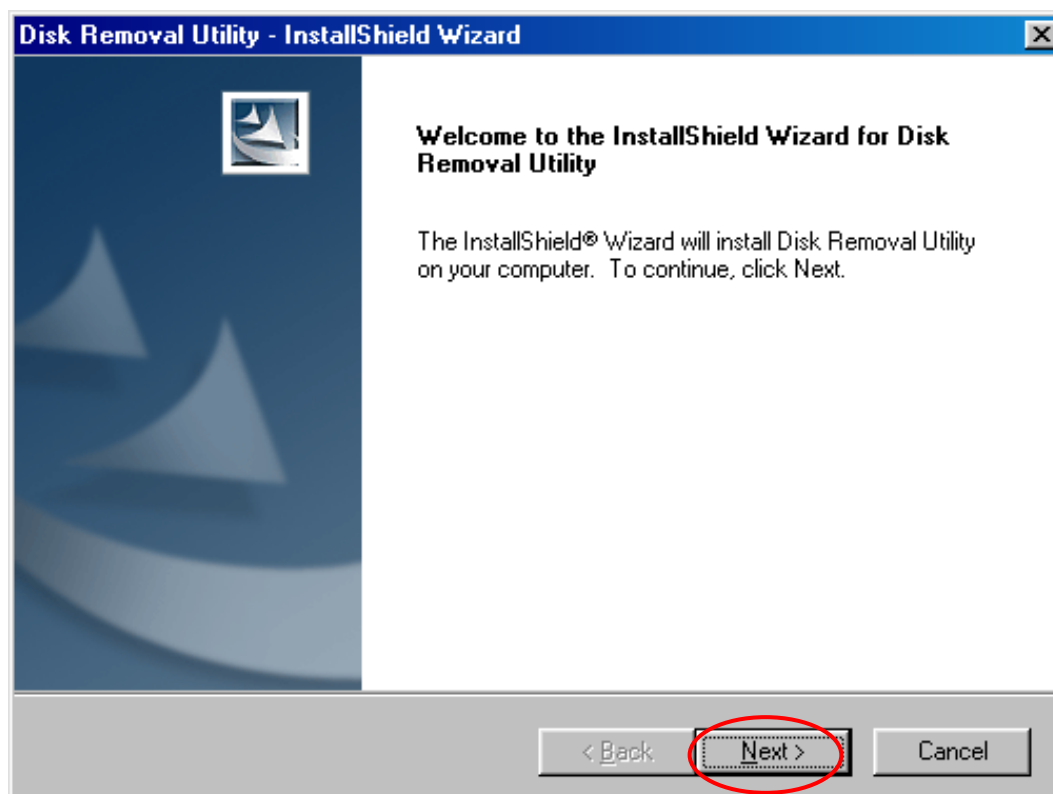

OTB External Enclosure Installation Guide

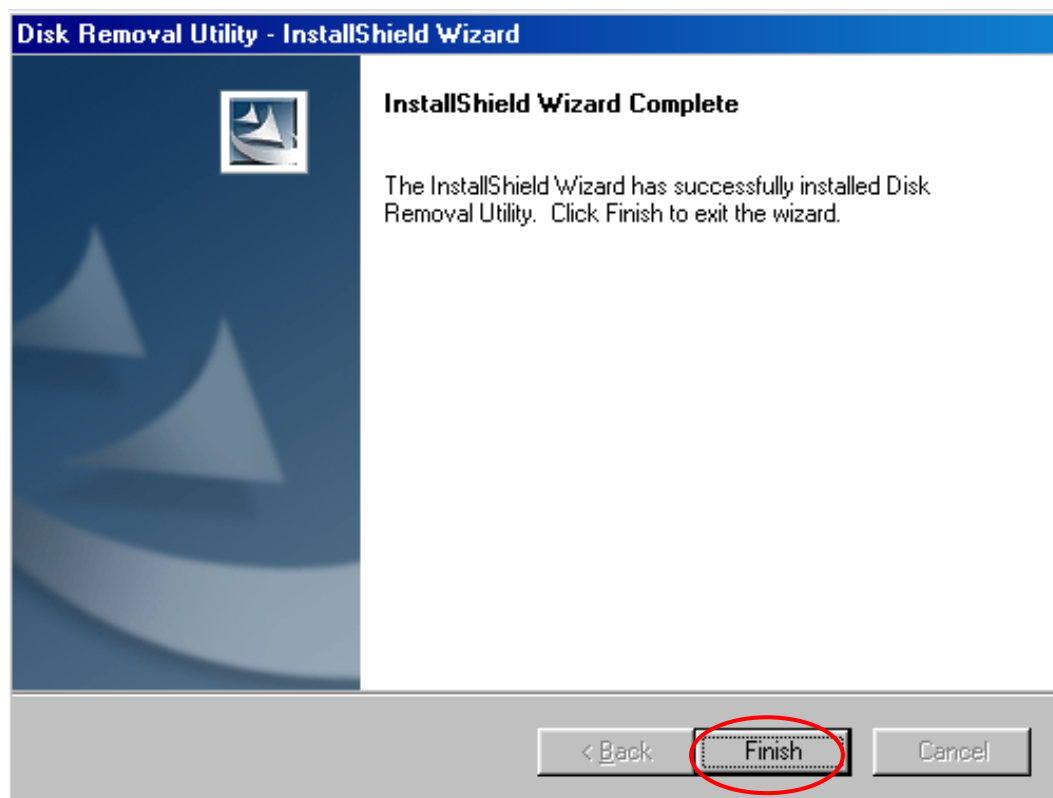

OTB External Enclosure Installation Guide