

External Enclosure User's Manual

(One Touch Backup)

✧ Include

Backup4all Software Installation Guide

Hardware Installation Guide



External Enclosure Driver Installation Guide

Backup4all Software Installation


- (1) Insert Backup4all CD to the CD-ROM driver.
- (2) Double Click “autorun.exe”
- (3) Please following instruction on the pop-up windows for installing the OTB software.




OTB External Enclosure Installation Guide

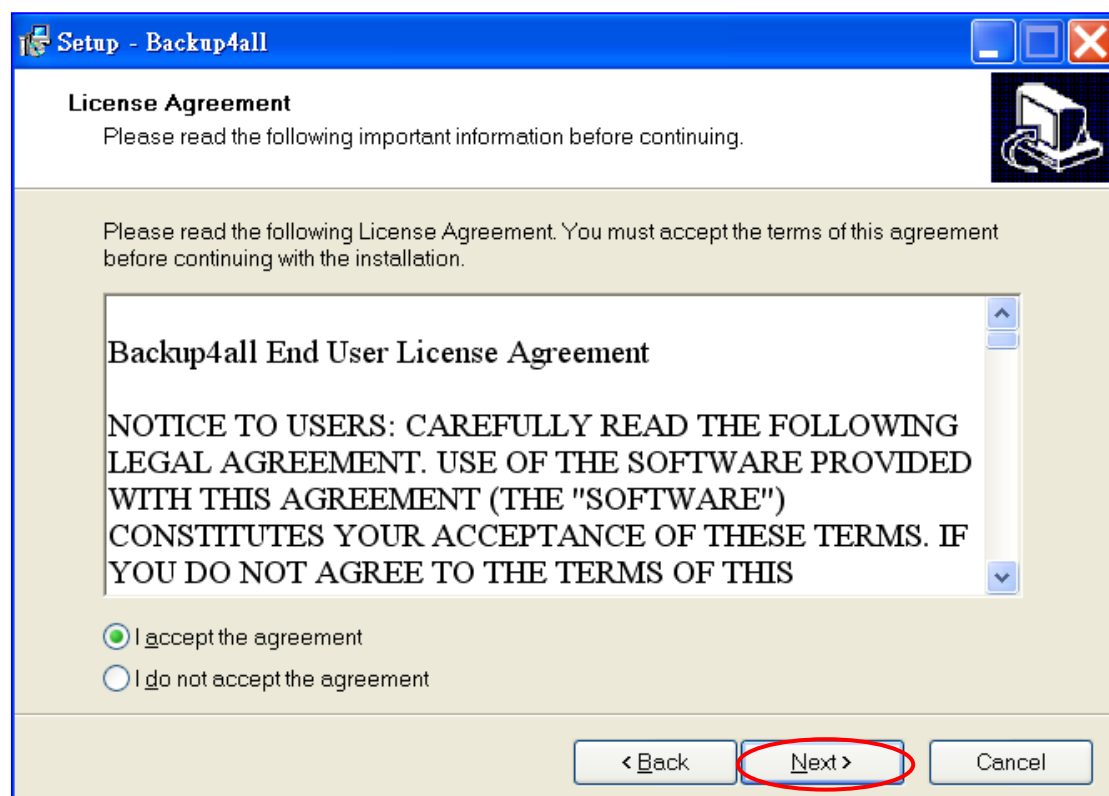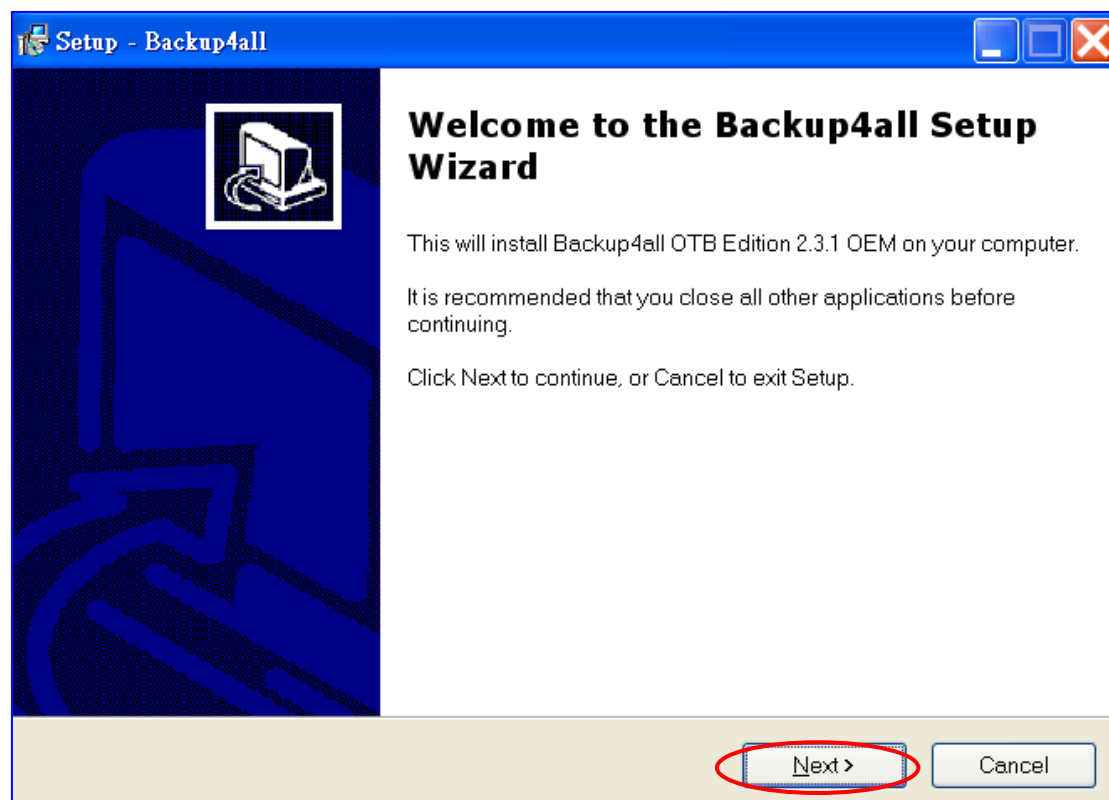



OTB External Enclosure Installation Guide

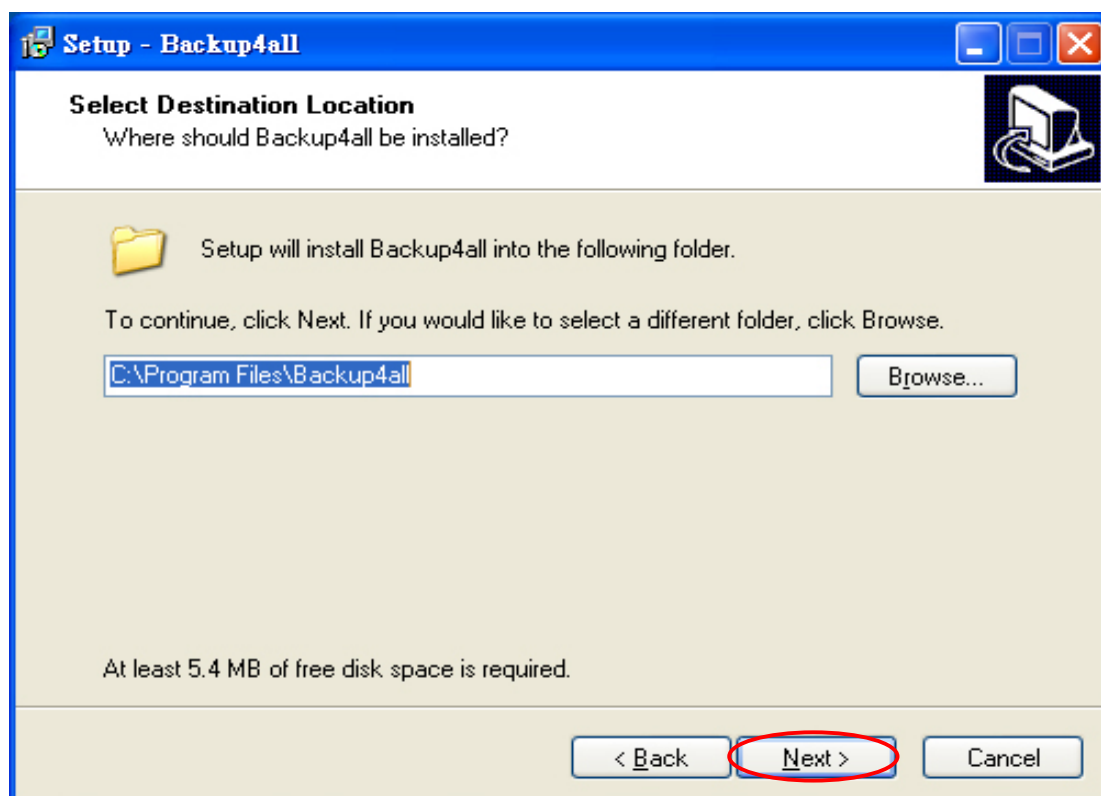



Select folder where Setup will install files (C:\Program Files\Backup4all) then click "Next"

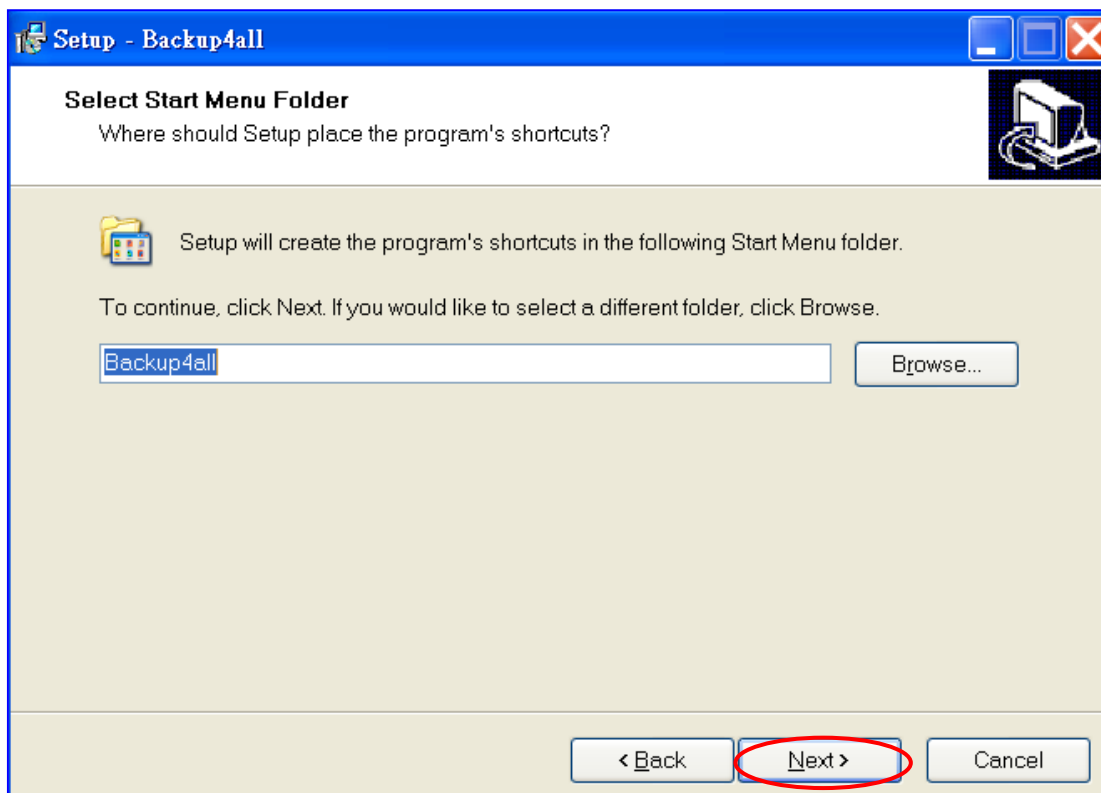

OTB External Enclosure Installation Guide

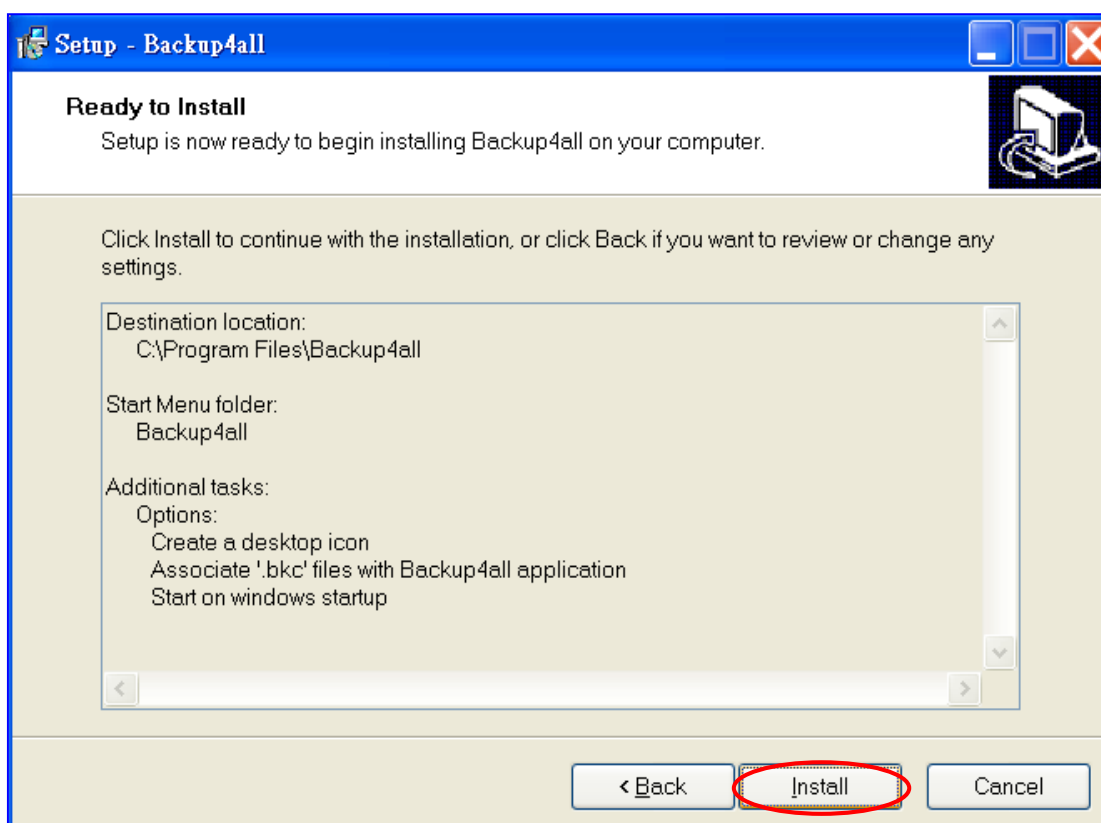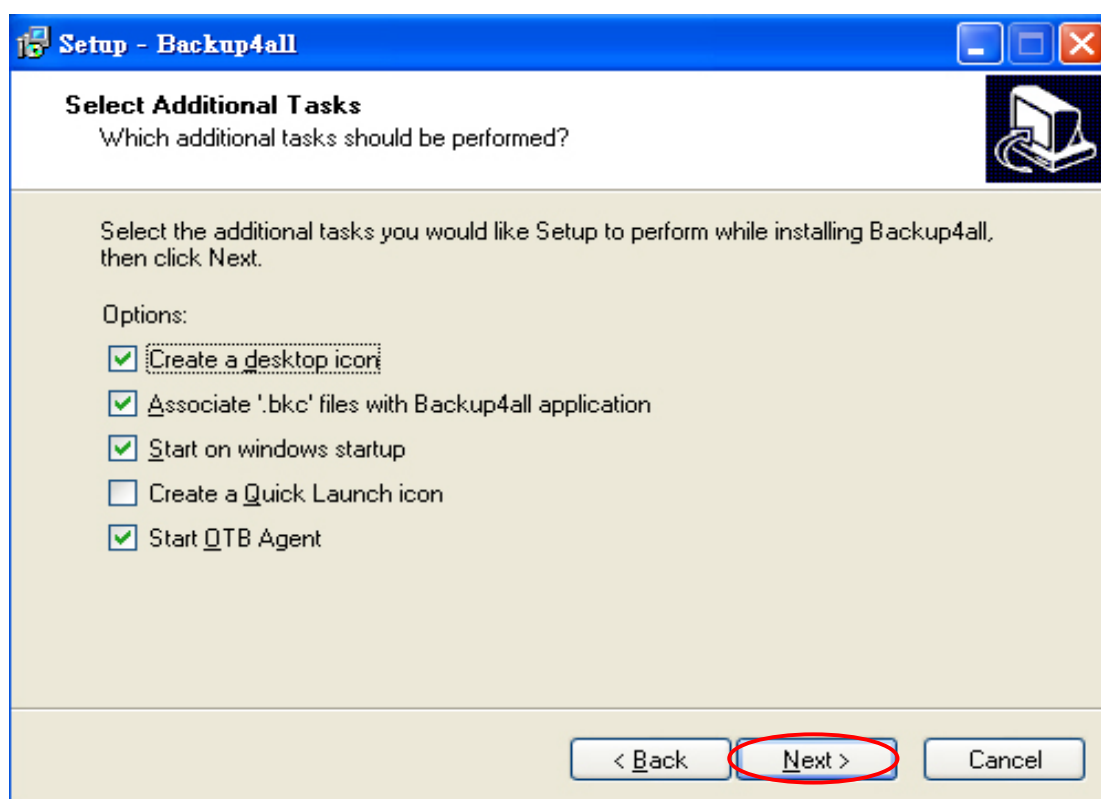

OTB External Enclosure Installation Guide

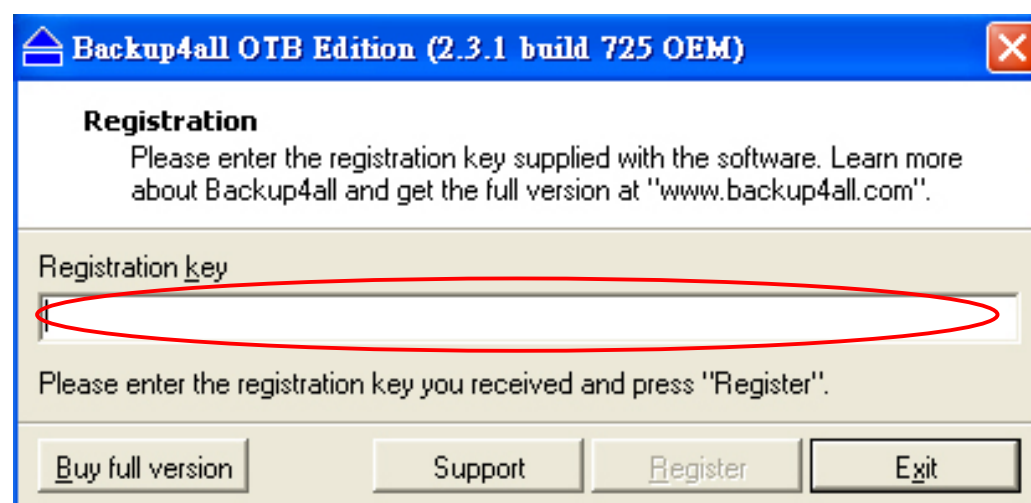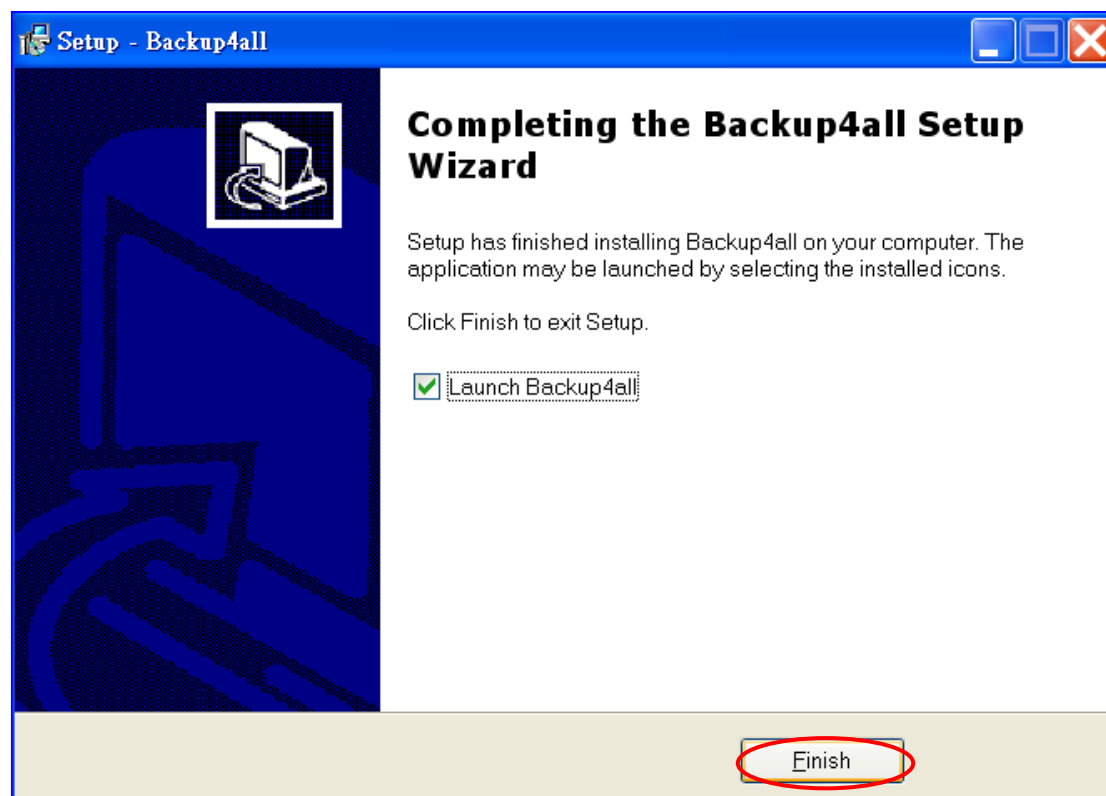


Enter the KEY on the CD and click “Register”.


Hardware Installation Guide

✧ Note: Please refer to the picture shown below

STEP1 : Release the 2 screws then pull out the rear panel and aluminum case.

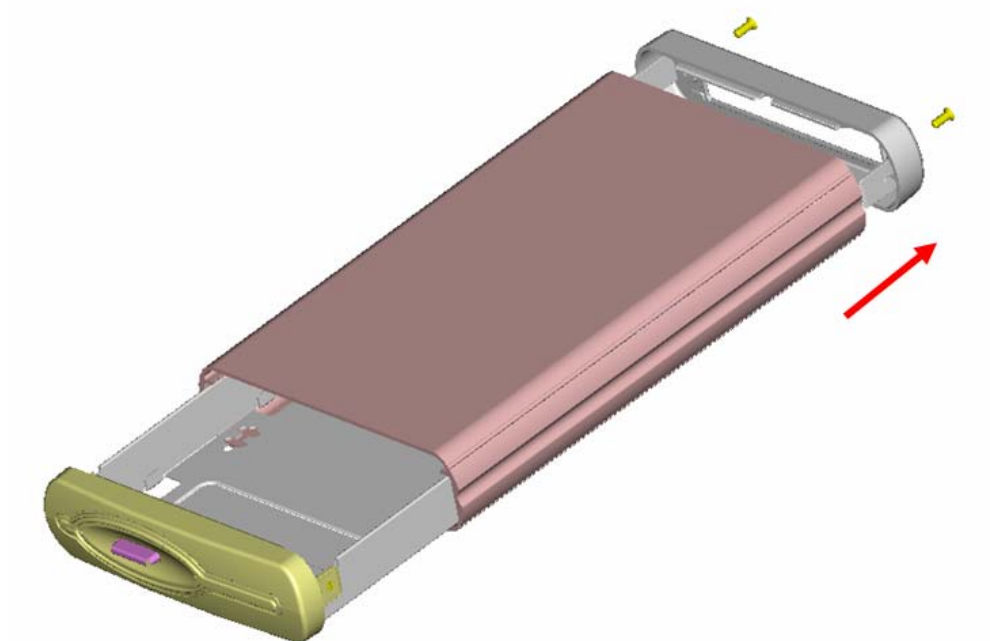


STEP2 : You will see the internal structure of the tray.

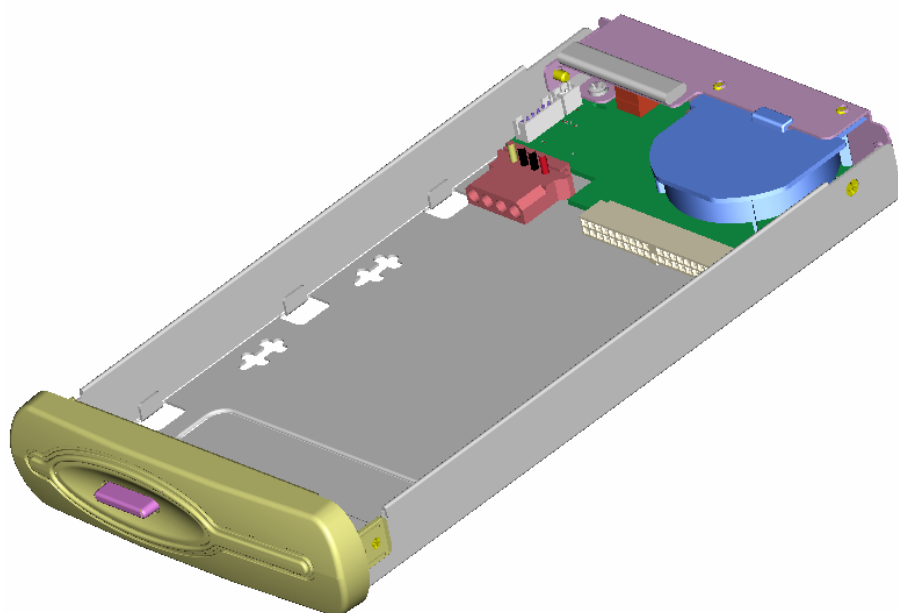


OTB External Enclosure Installation Guide

STEP3 : Connect the IDE and power cable to the Hard Drive

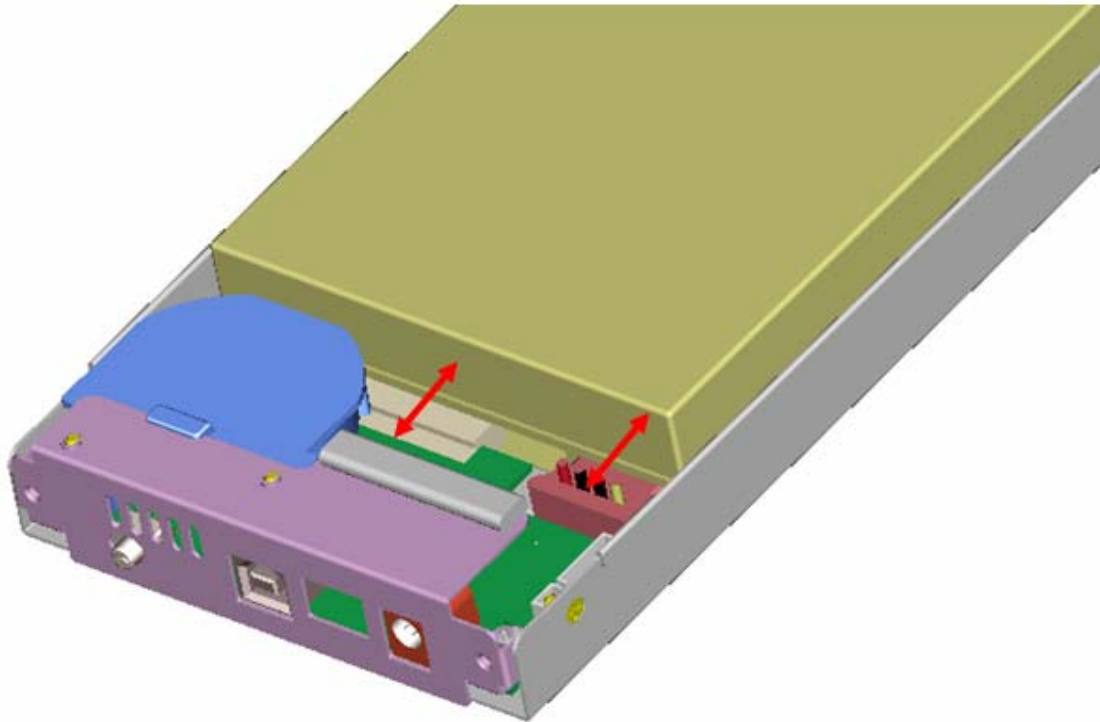


Note: Make sure all connectors are connected well.

STEP4 : Screw the HDD on the tray tightly.

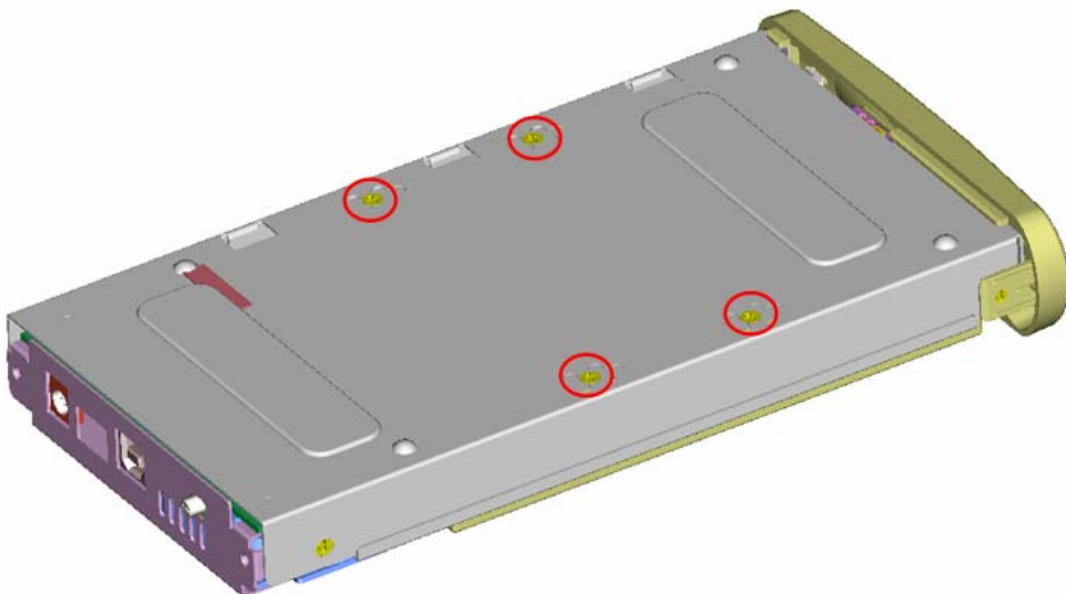


OTB External Enclosure Installation Guide

STEP5: Push the tray into the aluminum case.

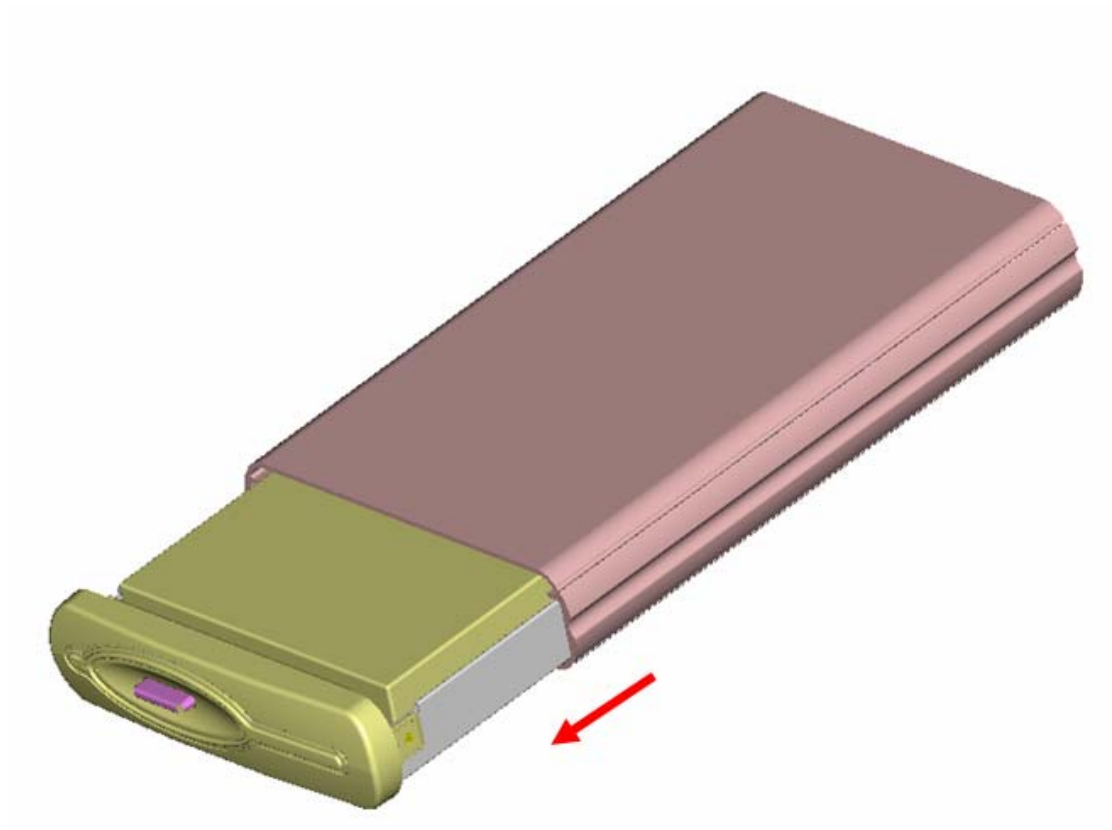

STEP6 : Screw the tray and enclosure together.

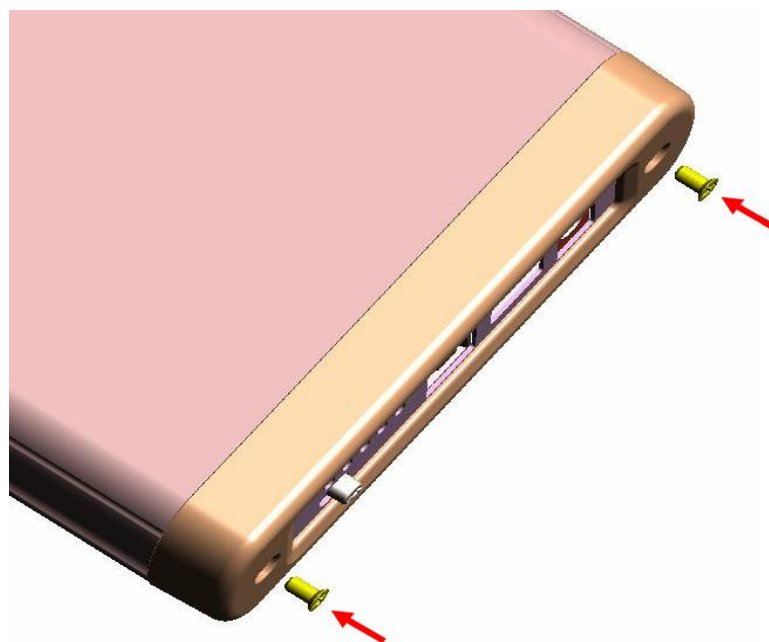

External Enclosure Driver Installation

Windows ME / 2000 / XP


The system already provides the support for the software

(Please do not install again unless necessary).



Windows 98 /98SE

- (1) Insert driver CD to the CD-ROM drive.**
- (2) Double Click “autorun.exe”**
- (3) Please following instruction on the pop-up windows for installing the 98 dirver.**

OTB External Enclosure Installation Guide

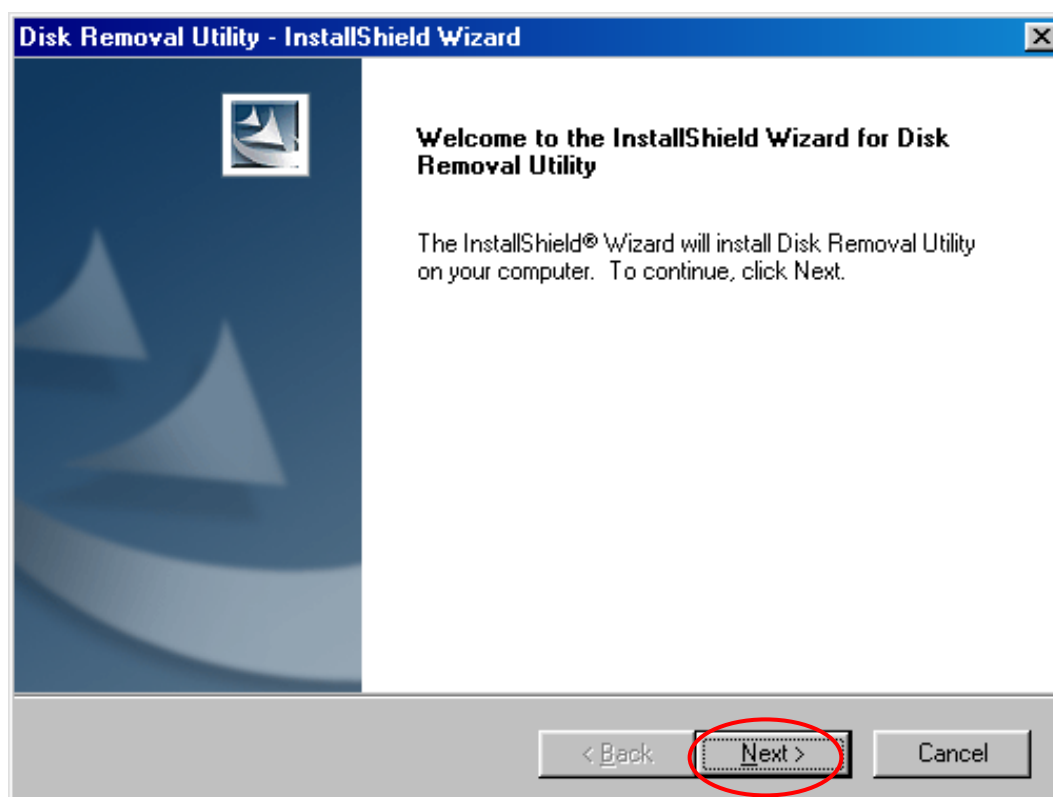

OTB External Enclosure Installation Guide

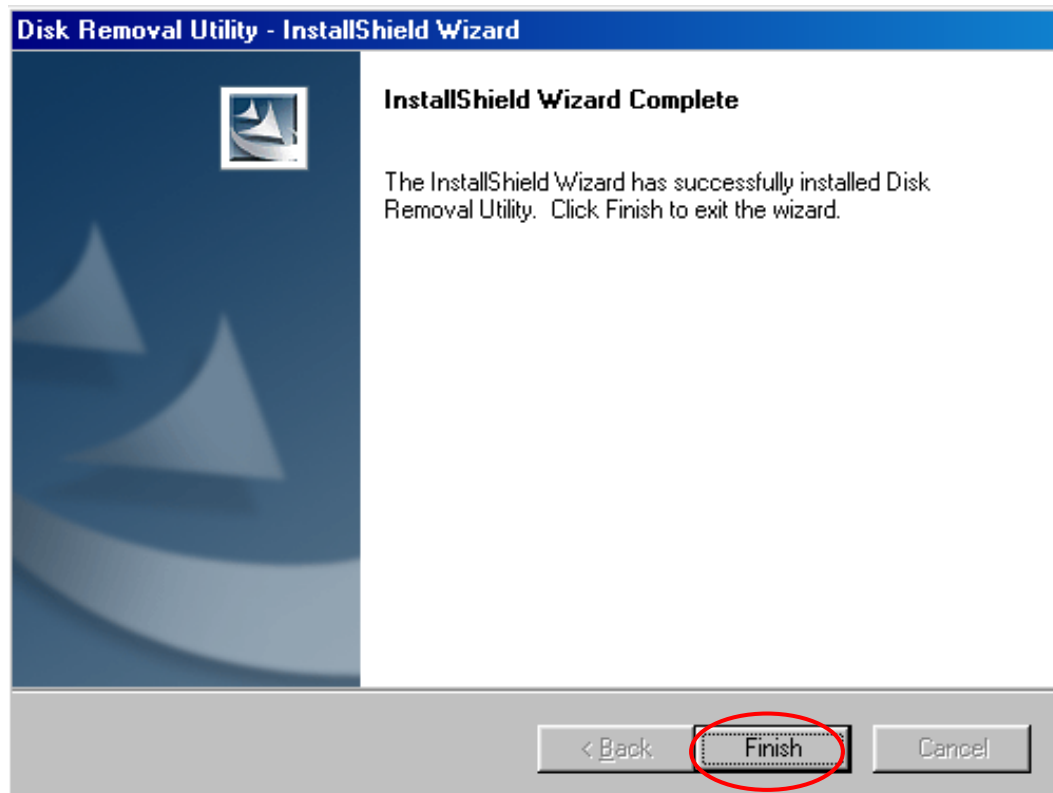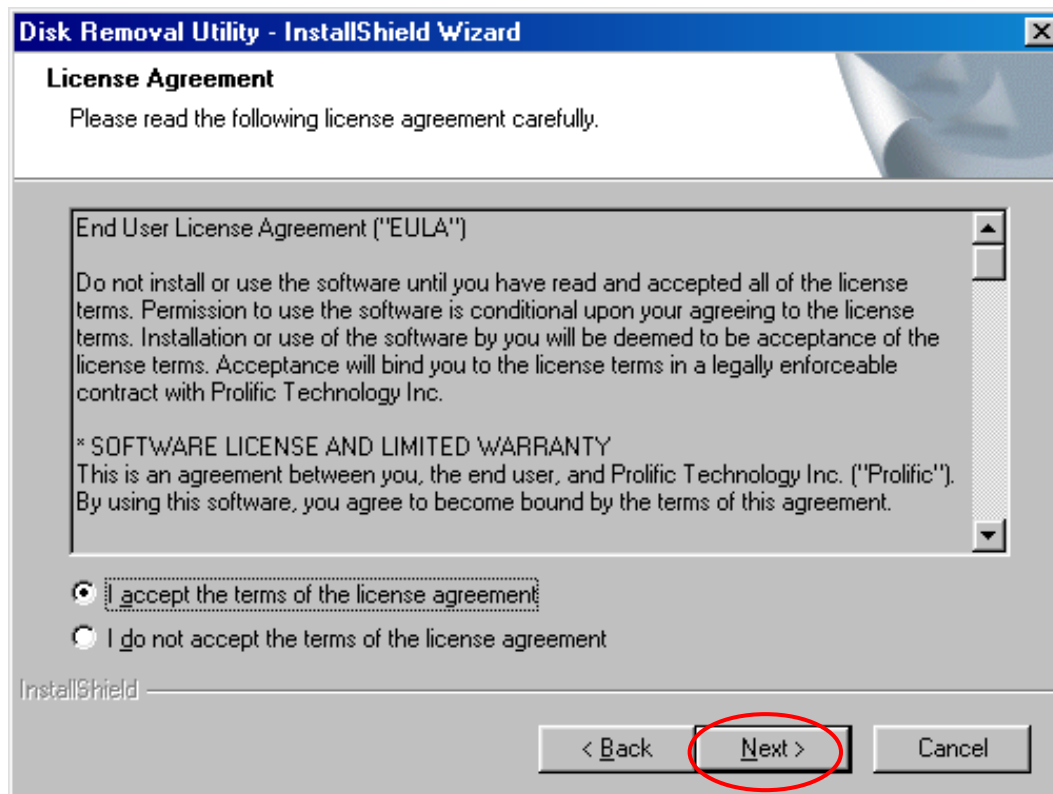

OTB External Enclosure Installation Guide

M0-90-318G