

# LINDY®

## CONNECTION PERFECTION


### SPEED-TERM TOOL FOR 90° KEYSTONE JACKS




1. Strip outer sheath




2. Fan out wires

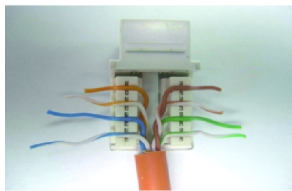


3. Insert jack

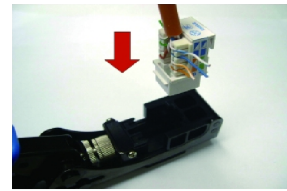


4. Compress handle

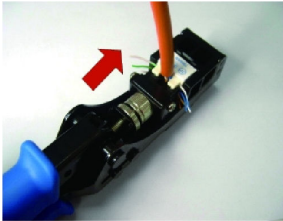

5. Remove jack

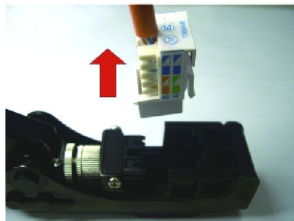


6. Completed

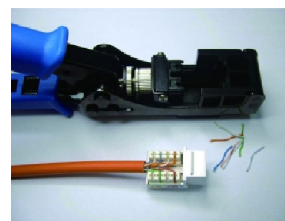

Compatible LINDY keystone jacks  
Narrow type M block  
No. 60366 Cat 5e  
No. 60367 Cat 6

Adjust the insertion/cutting  
depth by rotating the adjustment  
wheel

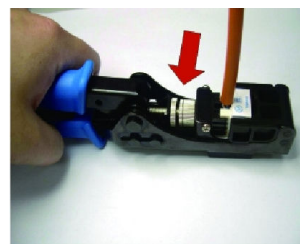

# No. 43219

Dated 6/30/2010 Version 1